


Fairing installation instructions

Install the fairing as follows using the diagram as a reference

- 1 Wrap a length of fairing around the cable and fix with the Velcro strip and cable ties. See diagram for orientation.
- 2 Attach another length of fairing around the cable with its Velcro and cable ties.
- 3 When fastened in place link adjacent fairings with a Carbine link through the eyelet holes as per diagram.
- 4 Repeat until all Fairing lengths are installed.

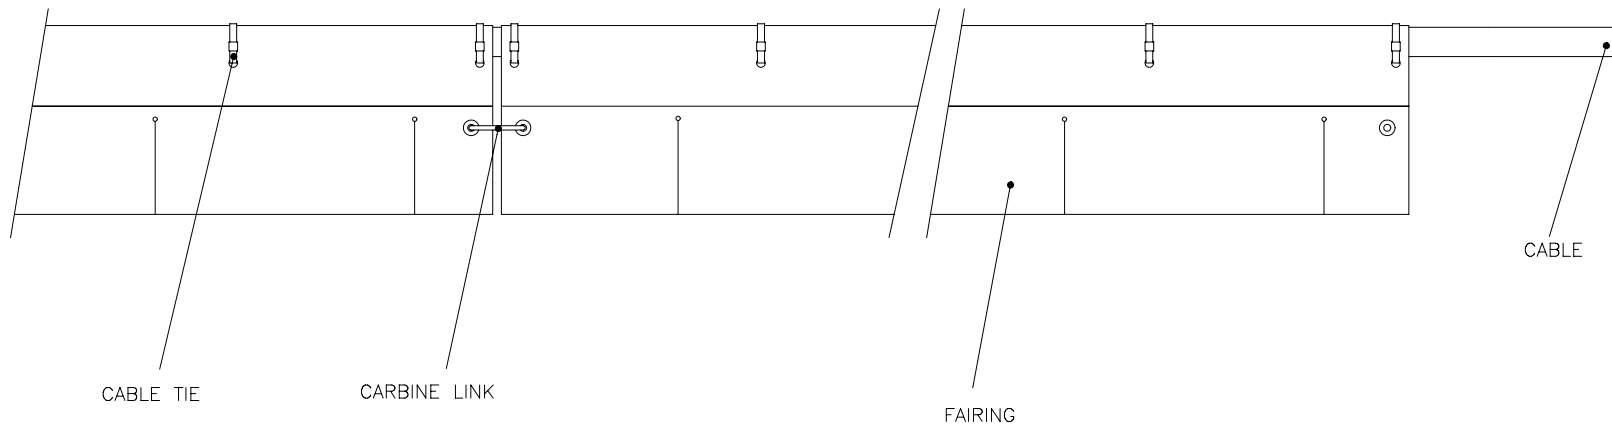

DATE 23Feb'04				CWA DESIGN COPYRIGHT NOT TO BE USED OR RE- PRODUCED WITHOUT EXPRESS PERMISSION FROM CWA	TOLERANCES :- UNLESS OTHERWISE STATED NO DEC PLACE ±0.5 ANGULAR ±1/4° 1 DEC PLACE ± 0.3 2 DEC PLACE ±0.15 HOLES UP TO 12.7mm +0.10mm -0 ALL COAXIAL DIAS CONCENTRIC WITHIN 0.05mm ALL HOLES ON PITCH CIRCLES WITHIN 0.10mm OF TRUE POS.	REMOVE ALL SHARP EDGES WITH 0.40 RAD OR CHAMFER UNLESS OTHERWISE STATED	MATERIAL	FINISH	SURFACE FINISH 0.8 UNLESS OTHERWISE STATED
DRAWN fjj							DRWG No. 10-3302		
SCALE NTS	23Feb'04		1	CWA PRODUCTS LIMITED HOOK BASINGSTOKE HANTS			TITLE Ø36 ROPE FAIRING INSTALLATION		
CHECKED	DATE	C.NOTE	ISS						